Modulating rotary actuator fail-safe for adjusting dampers in technical building installations

- Air damper size up to approx. 6 m²
- Torque motor 30 Nm
- Nominal voltage AC/DC 24 V
- Control modulating 2...10 V
- Position feedback 2...10 V
- with 2 integrated auxiliary switches



Technical data

	ectri	ادما	A	-+-
CI	ecui	La	u	dlo

Nominal voltage	AC/DC 24 V	
Nominal voltage frequency	50/60 Hz	
Nominal voltage range	AC 19.228.8 V / DC 21.628.8 V	
Power consumption in operation	7 W	
Power consumption in rest position	4.5 W	
Power consumption for wire sizing	12 VA	
Auxiliary switch	2 x SPDT, 1 x 10% / 1 x 11100%	
Switching capacity auxiliary switch	1 mA3 A (0.5 A inductive), DC 5 VAC 250 V	
Connection supply / control	Cable 1 m, 4 x 0.75 mm² (halogen-free)	
Connection auxiliary switch	Cable 1 m, 6 x 0.75 mm² (halogen-free)	
Parallel operation	Yes (note the performance data)	

Functional data

Torque motor	30 Nm
Torque fail-safe	30 Nm
	
Operating range Y	210 V
Input impedance	100 kΩ
Position feedback U	210 V
Position feedback U note	Max. 0.5 mA
Position accuracy	±5%
Direction of motion motor	selectable with switch L/R
Direction of motion fail-safe	selectable by mounting L/R
Manual override	by means of hand crank and locking switch
Angle of rotation	Max. 95°
Angle of rotation note	adjustable starting at 33% in 5% steps (with mechanical end stop)
Running time motor	150 s / 90°
Running time fail-safe	<20 s @ -2050°C / <60 s @ -30°C
Sound power level, motor	45 dB(A)
Sound power level, fail-safe	71 dB(A)
Mechanical interface	Universal shaft clamp 1226.7 mm
Position indication	Mechanical
Service life	Min. 60'000 fail-safe positions
Protection class IEC/EN	III, Safety Extra-Low Voltage (SELV)
Due to ation alone availion and tale IEC/EN	II waterface and to acceletize a

Safety data

TH 6 6 : 5 : 1	
III, Safety Extra-Low Voltage (SELV)	
II, reinforced insulation	
IP54	
CE according to 2014/30/EU	
CE according to 2014/35/EU	
IEC/EN 60730-1 and IEC/EN 60730-2-14	
Type 1.AA.B	
0.8 kV	



	Technical data sheet	EF24A-SR-S2
Safety data	Rated impulse voltage auxiliary switch	2.5 kV
	Pollution degree	3
	Ambient humidity	Max. 95% RH, non-condensing
	Ambient temperature	-3050°C [-22122°F]
	Storage temperature	-4080°C [-40176°F]
	Servicing	maintenance-free
Weight	Weight	4.7 kg

Safety notes



- This device has been designed for use in stationary heating, ventilation and air-conditioning systems and must not be used outside the specified field of application, especially in aircraft or in any other airborne means of transport.
- Outdoor application: only possible in case that no (sea) water, snow, ice, insolation or
 aggressive gases interfere directly with the device and that it is ensured that the ambient
 conditions remain within the thresholds according to the data sheet at any time.
- Only authorised specialists may carry out installation. All applicable legal or institutional installation regulations must be complied during installation.
- The device may only be opened at the manufacturer's site. It does not contain any parts that can be replaced or repaired by the user.
- · Cables must not be removed from the device.
- To calculate the torque required, the specifications supplied by the damper manufacturers
 concerning the cross-section, the design, the installation situation and the ventilation
 conditions must be observed.
- The two switches integrated in the actuator are to be operated either on power supply voltage
 or at safety extra-low voltage. The combination power supply voltage/safety extra-low voltage
 is not permitted.
- The device contains electrical and electronic components and must not be disposed of as household refuse. All locally valid regulations and requirements must be observed.

Product features

Mode of operation

The actuator is connected with a standard control signal of 0...10 V and moves the damper to the operating position at the same time as tensioning the return spring. The damper is turned back to the fail-safe position by spring force when the supply voltage is interrupted.

Simple direct mounting

Simple direct mounting on the damper shaft with a universal shaft clamp, supplied with an antirotation device to prevent the actuator from rotating.

Shaft stabiliser

The shaft clamp of the spring-return actuator is factory-equipped with a shaft stabiliser for the stabilisation of the combination of damper, damper shaft and actuator.

This is comprised of two plastic support rings and must be left in place, partially, or completely removed, depending on the installation situation and the shaft diameter.

Manual override

By using the hand crank the damper can be actuated manually and engaged with the locking switch at any position. Unlocking is carried out manually or automatically by applying the operating voltage.

Adjustable angle of rotation

Adjustable angle of rotation with mechanical end stops.

High functional reliability

The actuator is overload protected and automatically stops when the end stop is reached.

Flexible signalling

The actuator has one auxiliary switch with a fixed setting and one adjustable auxiliary switch. They permit a 10% or 11...100% angle of rotation to be signaled.



Accessories

Electrical accessories	Description	Туре
	Signal converter voltage/current 100 kΩ 420 mA, Supply AC/DC 24 V	Z-UIC
	Positioner for wall mounting	SGA24
	Positioner for built-in mounting	SGE24
	Positioner for front-panel mounting	SGF24
	Positioner for wall mounting	CRP24-B1
Mechanical accessories	Description	Туре
	End stop indicator	IND-EFB
	Shaft clamp reversible, clamping range Ø1226.7 mm	K9-2
	Damper crank arm Slot width 8.2 mm, clamping range Ø1425 mm	KH10
	Actuator arm Slot width 8.2 mm	KH-EFB
	Mounting kit for linkage operation for flat and side installation	ZG-EFB
	Anti-rotation mechanism 230 mm, Multipack 20 pcs.	Z-ARS230
	Hand crank 63 mm	ZKN2-B

Electrical installation



Supply from isolating transformer.

Parallel connection of other actuators possible. Observe the performance data.

Wire colours:

1 = black

2 = red

3 = white

5 = orange

S1 = violet

S2 = red


S3 = white


S4 = orange

S5 = pink


S6 = grey

Wiring diagrams

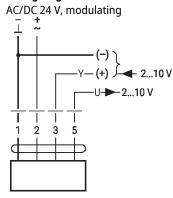

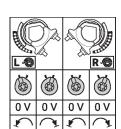


Auxiliary switch

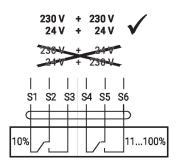



Operating controls and indicators

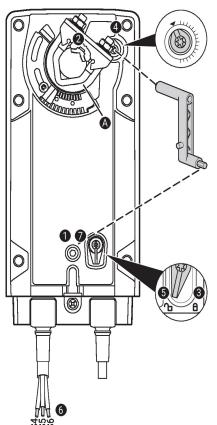

Auxiliary switch settings

1

Note: Perform settings on the actuator only in deenergised state.

For the auxiliary switch position settings, carry out points 1 to 2 successively.

1 Manual override

Turn the hand crank until the desired switching position is set.

2 Shaft clamp

Edge line A displays the desired switching position of the actuator on the scale.

3 Fasten the locking device

Turn the locking switch to the "Locked padlock" symbol.

4 Auxiliary switch

Turn rotary knob until the notch points to the arrow symbol.

5 Unlock the locking device

Turn the locking switch to the "Unlocked padlock" symbol or unlock with the hand crank.

6 Cable

Connect continuity tester to S4 + S5 or to S4 + S6.

Manual override

Turn the hand crank until the desired switching position is set and check whether the continuity tester shows the switching point.

Installation notes



The shaft stabiliser must nevertheless be used with installation of the anti-rotation device on the opposite side of the shaft clamp and a shaft diameter <20 mm.

Shaft stabiliser long shaft mounting

In the case of long shaft installation the use of the shaft stabiliser at a shaft diameter of

- 12...20 mm is necessary
- 21...26.7 mm is not necessary and can be removed

 
Shaft stabiliser short shaft mounting

In the case of short shaft installation, the necessity of the shaft stabiliser is dispensed with. It can be removed or – if the shaft length permits this – left in the shaft clamp.



Dimensions

Spindle length



Clamping range

